


ProTalk Plus


Firmware Update Tutorial

The ProTalk Plus Firmware Update Tutorial will walk you through the steps needed to update your B1290 to the latest firmware revision. Before you begin, make sure that the latest ProTalk B1290 Database Editor (programming software) has been installed on your PC (http://barnettprotalk.com/Support/software/ProTalk_Software_Suite.exe). The latest B1290 .upg file needs to be downloaded from our website as well (<http://barnettprotalk.com/Support/Resource-Center.php#firmware>). This utility is for V2.0 hardware and higher. If an update is required for an earlier version, the B1290 needs to be sent to Barnett Engineering.

Apply power to the B1290, connect the USB cable and open the programming software:

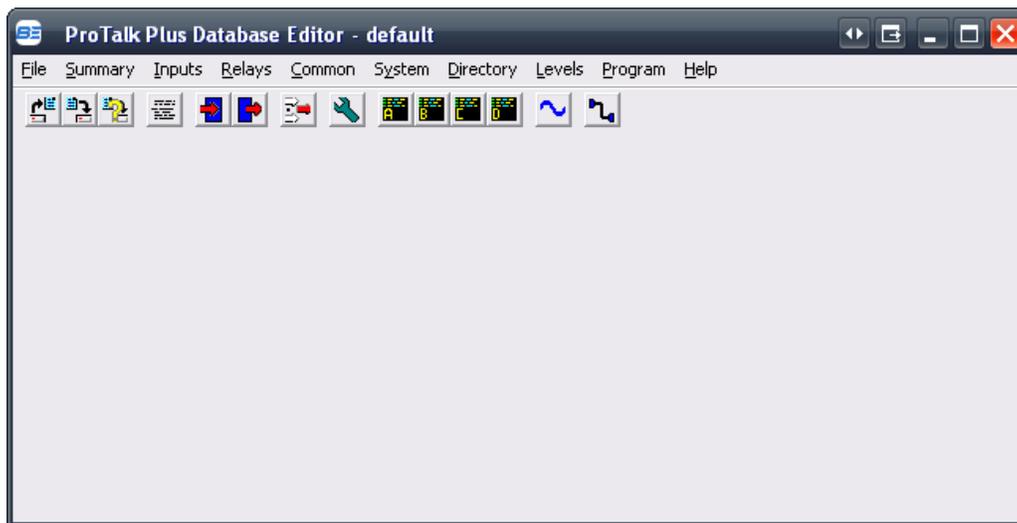

Under the 'File' heading, select 'Firmware Upgrade:'

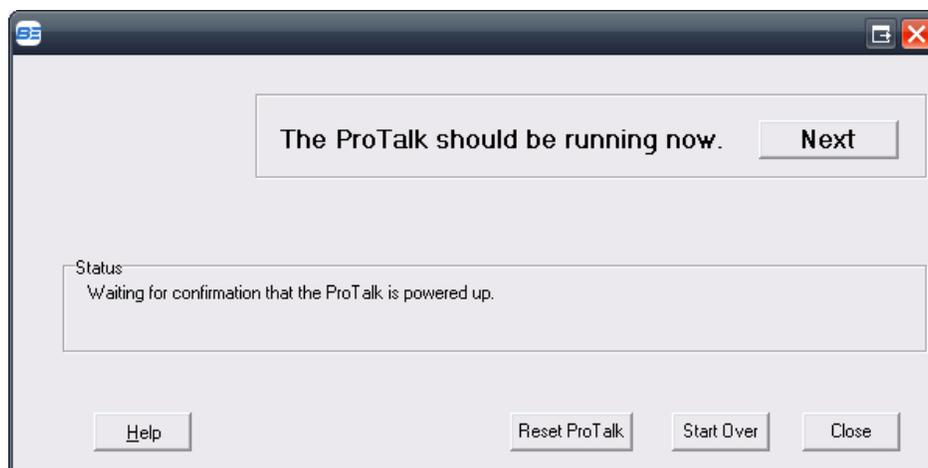


Press the 'Next' button:

ProTalk Plus


Firmware Update Tutorial



The COM port will be selected automatically. Press 'Next' again:

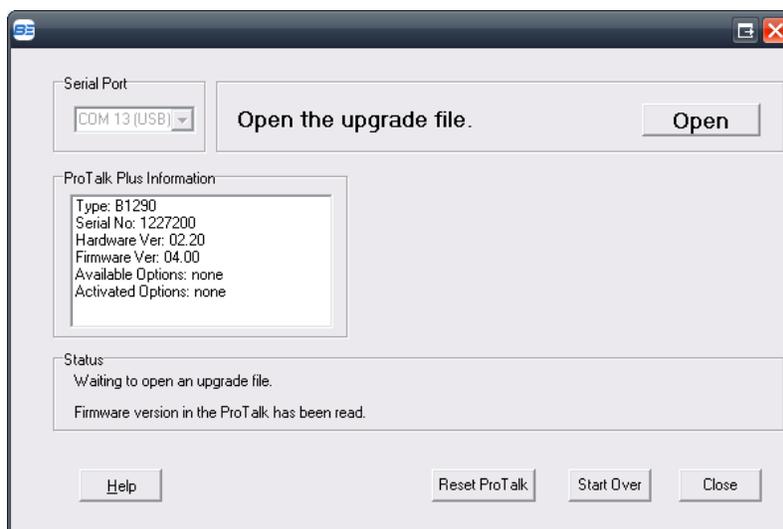


Press 'Open' and select .upg file from the location it was saved to earlier:

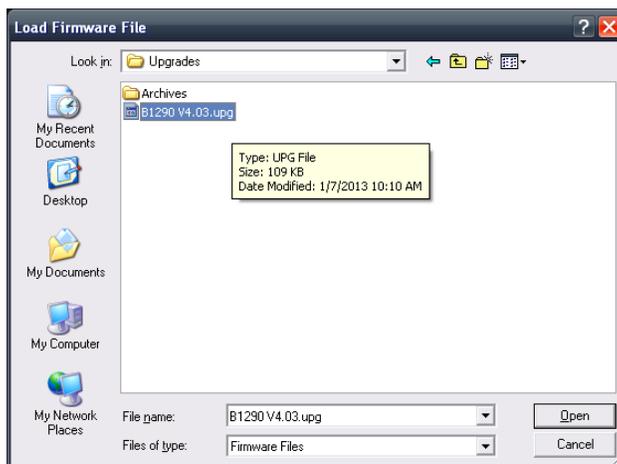


ProTalk Plus

Firmware Update Tutorial

Press 'Next' and the transfer will begin:

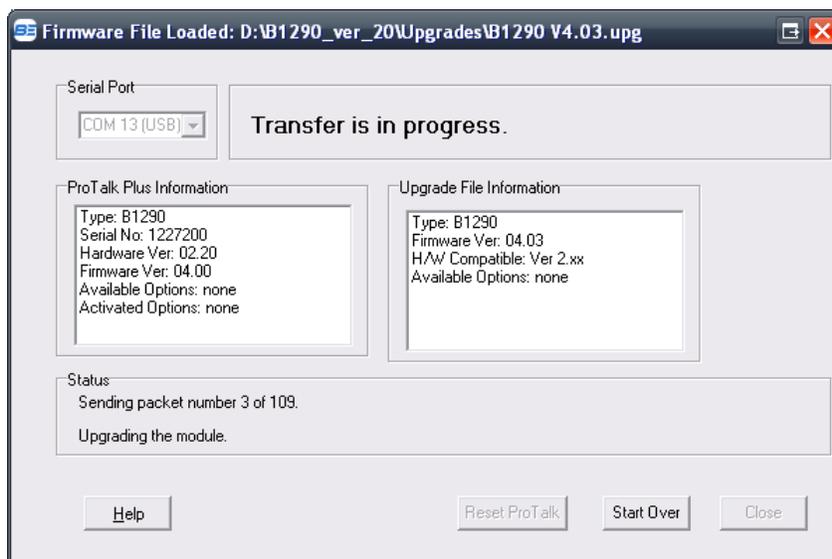

Once the file transfer has completed, a 'Success!!' message appears:

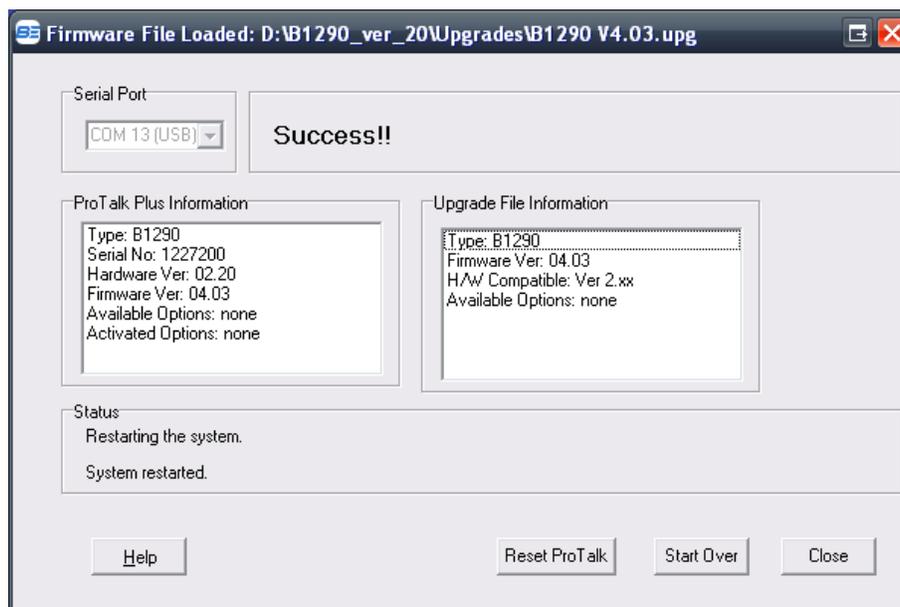

The B1290 will automatically restart. Close the window and exit the program. The update is complete.