



ProTalk Cv3

Battery Installation Instructions

Remove the 4 screws on both sides of the Cv3:

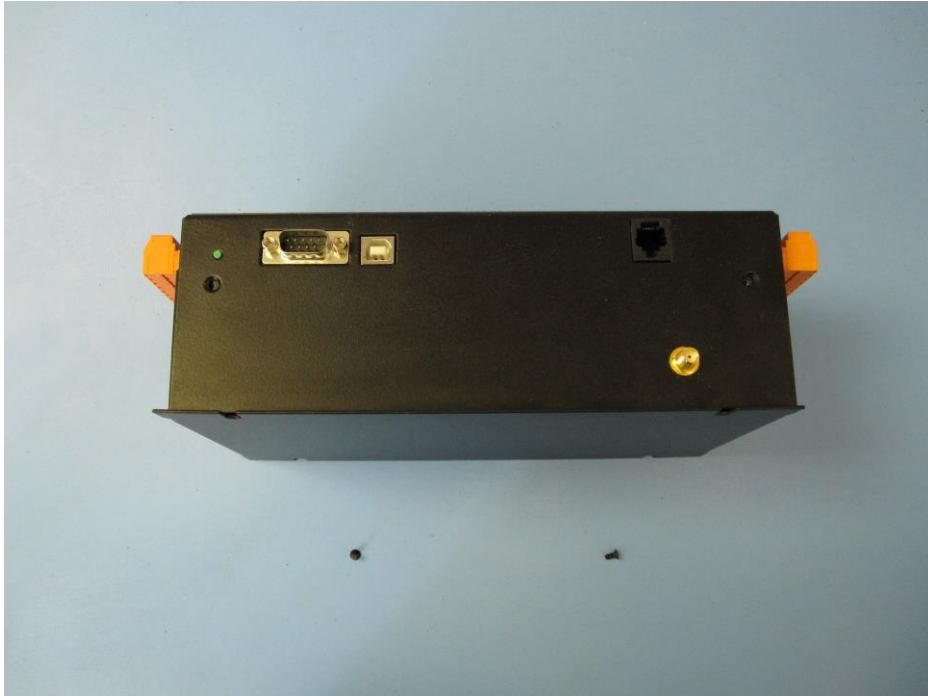

Attach the provided power cable to the battery:

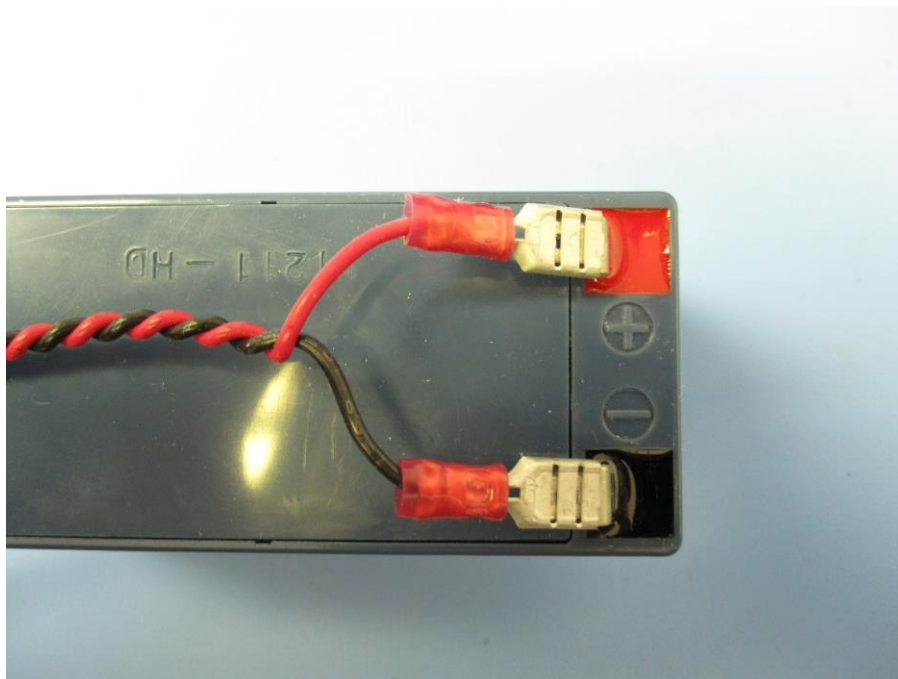


ProTalk Cv3


Battery Installation Instructions

The red wire must match the red terminal (+) and the black wire the black terminal (-). *Failure to connect the battery properly could damage the Cv3.*

Position the battery against the side of the base:

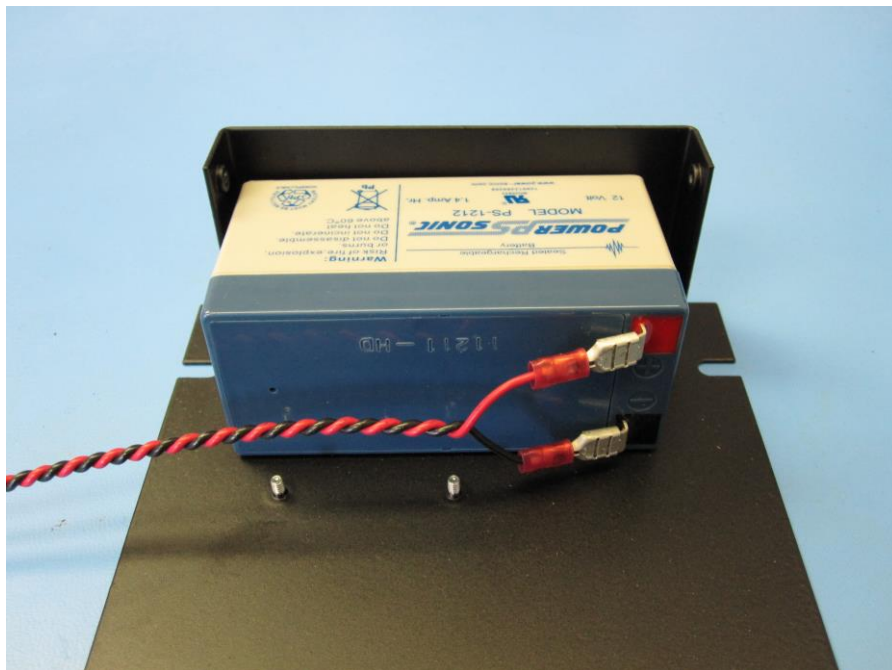


Place the bracket on top of the battery:

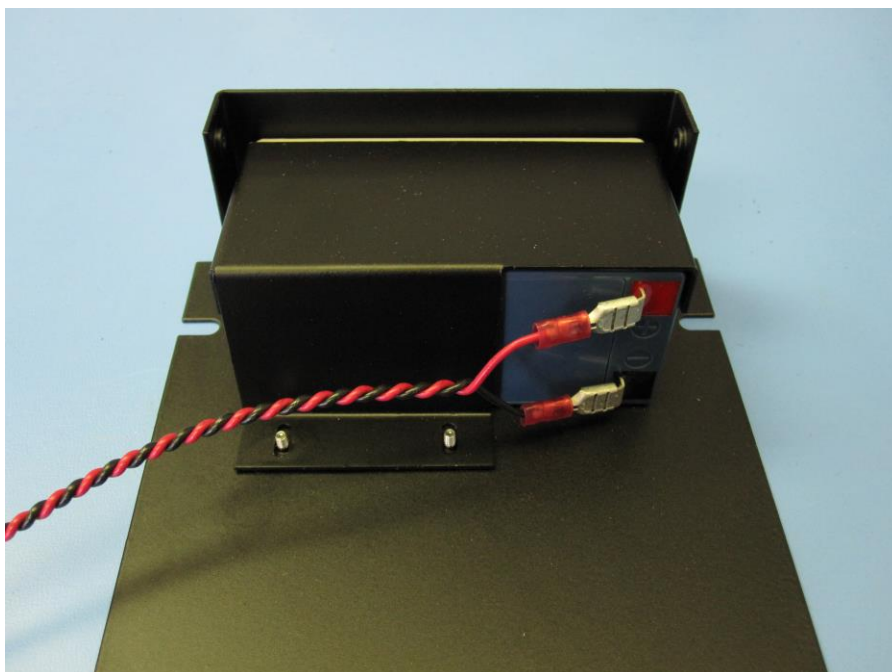


Press the bracket towards the corner of the base and then fasten it using the lock nuts:

ProTalk Cv3

Battery Installation Instructions

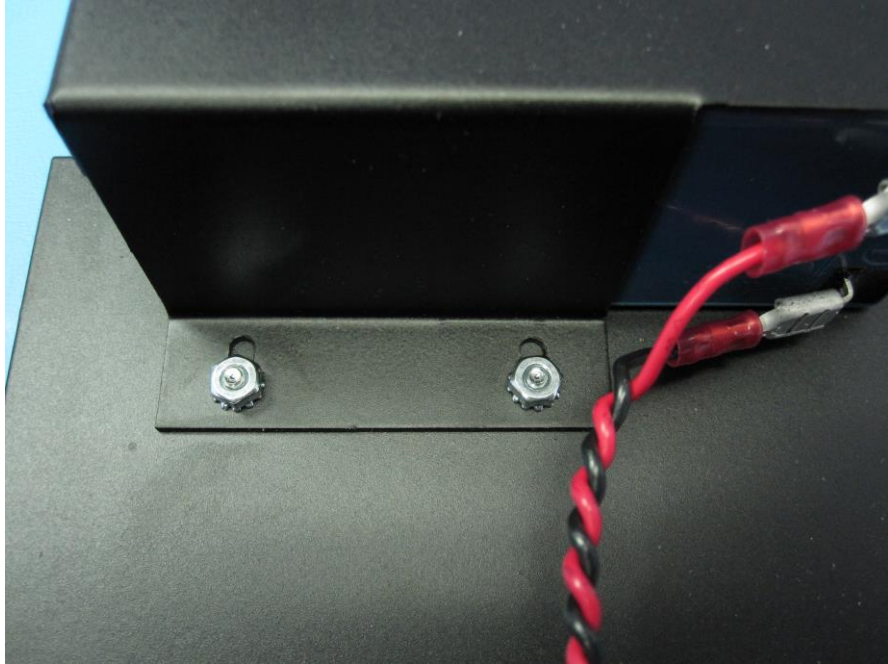


Connect the other end of the cable to the Cv3:

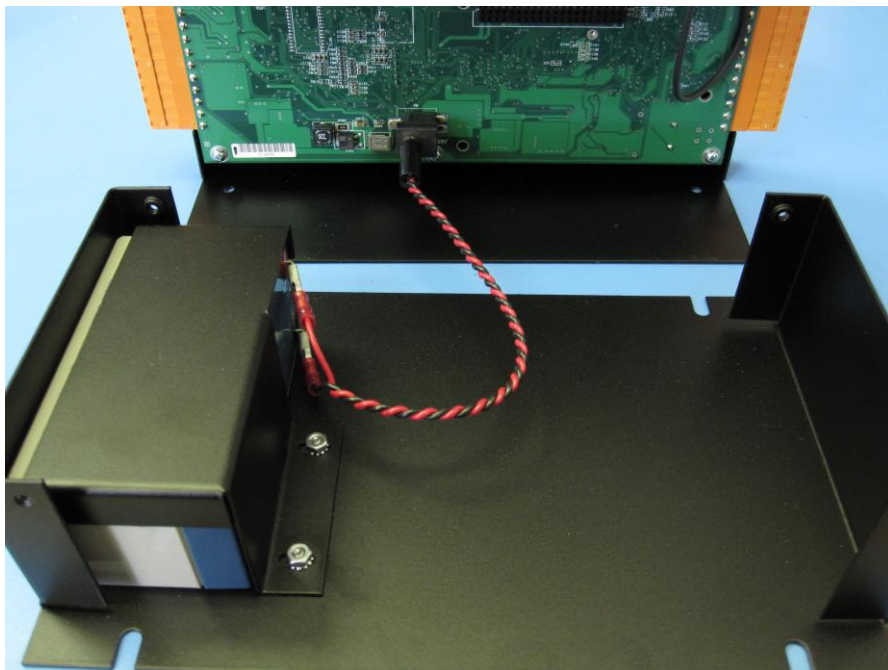


ProTalk Cv3

Battery Installation Instructions

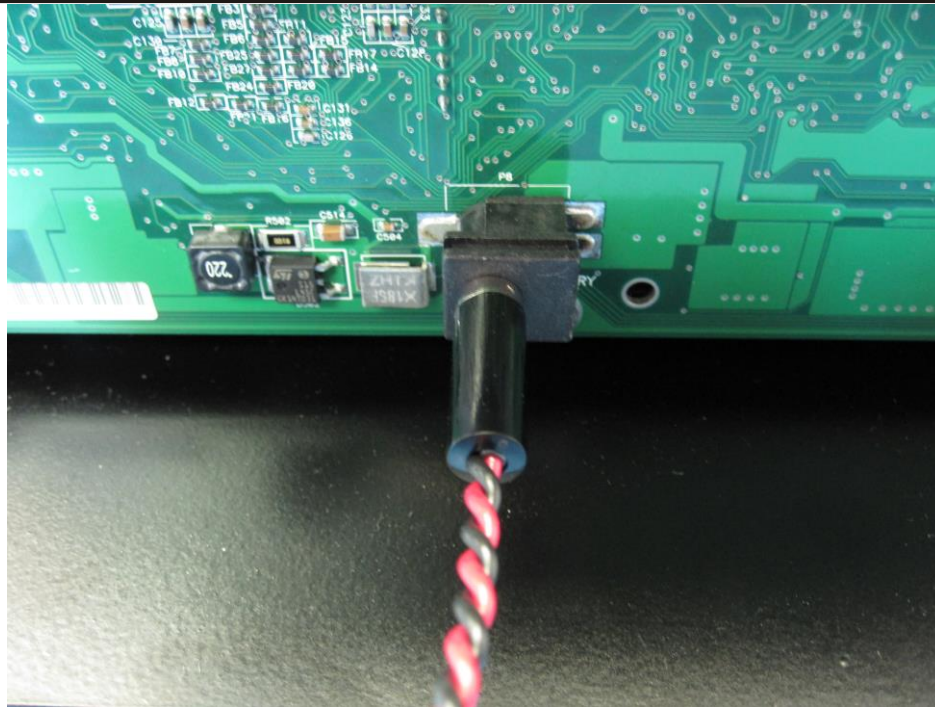


Reassemble the unit. The firmware now needs to be updated before the battery can be used.

Open the Cv3 Database Editor and select File -> Update Module Firmware. Follow the instructions until the following window appears:

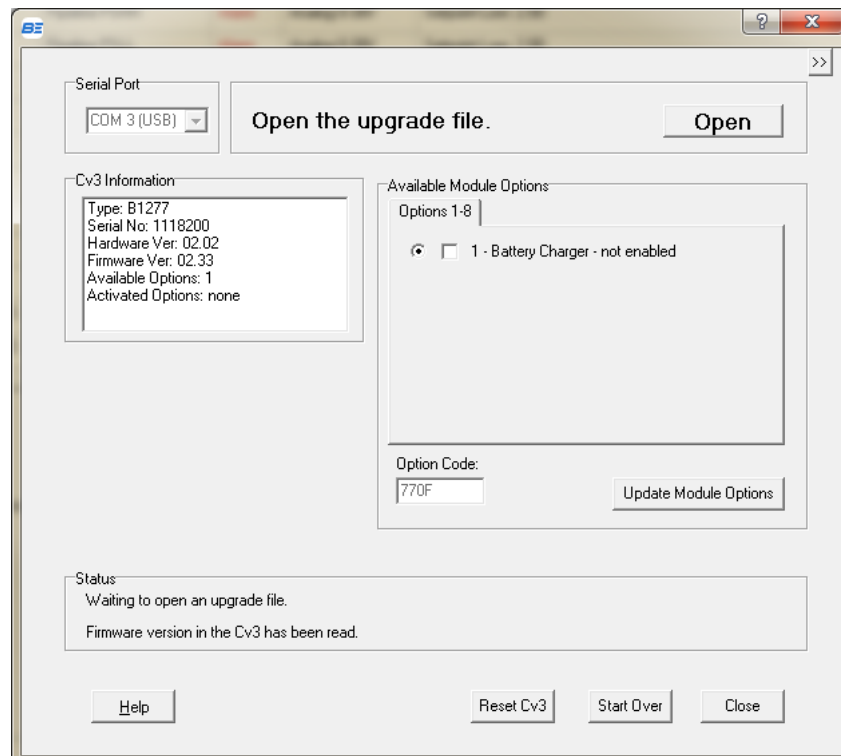

Battery Installation Instructions

Check the Battery Charger - enabled box and press the Update Module Options button:

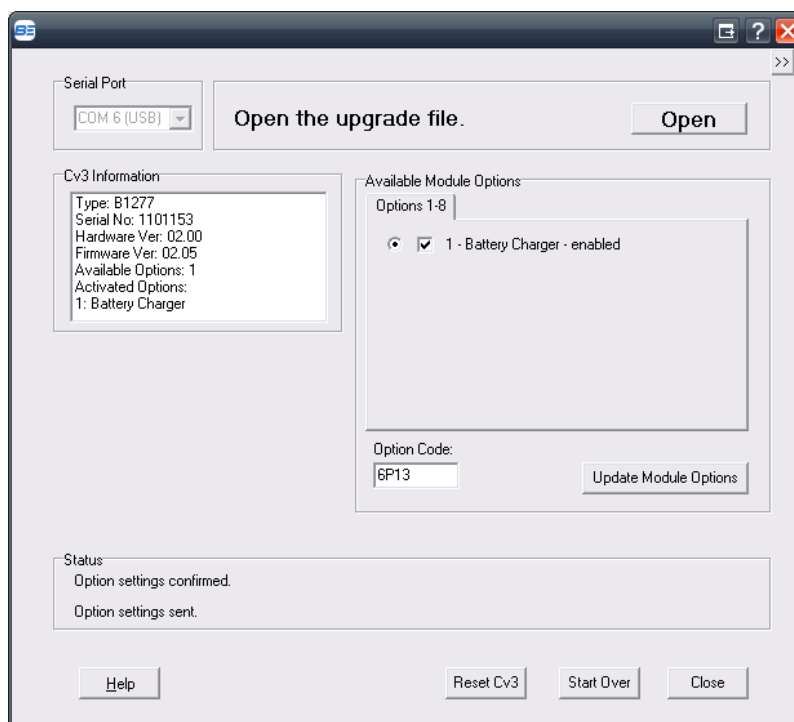

Verify that the option settings are confirmed (under the Status heading) and press the Close button.

The Cv3 battery backup option is now available.