

ProTalk Cv3

Battery Replacement Instructions

First, remove the 4 screws on both sides of the Cv3:



Then open the unit:



Barnett Engineering Ltd.
#200, 550 - 71st Avenue SE
Calgary, Alberta
T2H 0S6

PHONE: (403) 255-9544
TOLL: (800) 268-2646
www.barnettprotalk.com

ProTalk CV3

Battery Replacement Instructions

Remove the battery cable terminals:



Remove the 4-40 locknuts and battery bracket:




Barnett Engineering Ltd.
#200, 550 - 71st Avenue SE
Calgary, Alberta
T2H 0S6

PHONE: (403) 255-9544
TOLL: (800) 268-2646
www.barnettprotalk.com

ProTalk Cv3

Battery Replacement Instructions

After replacing the battery, refasten the battery with the bracket and reconnect the cable terminals as follows:

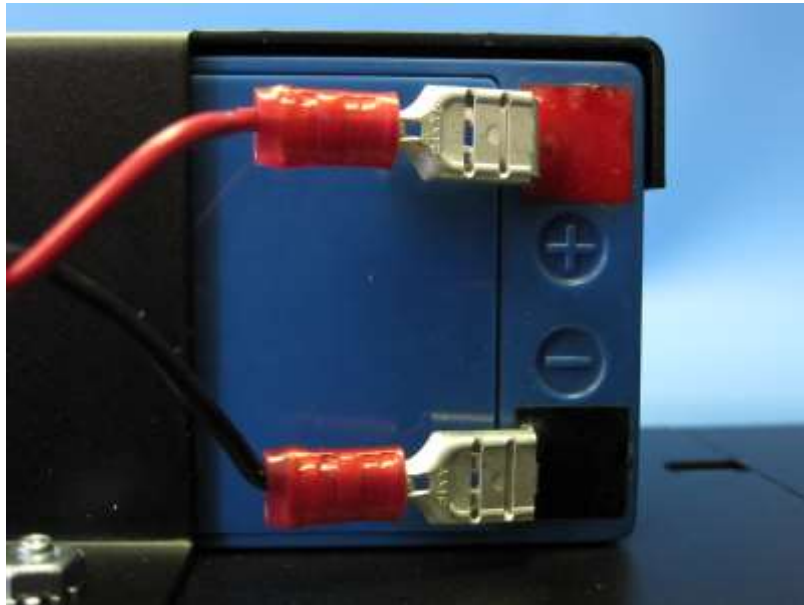

The red wire must match the red terminal (+) and the black wire the black terminal (-). *Failure to connect the battery properly could damage the Cv3.*

Reassemble the unit.

Note:

We have replacement batteries in stock, but if you'd like to purchase a replacement elsewhere, the part # is:



Barnett Engineering Ltd.
#200, 550 - 71st Avenue SE
Calgary, Alberta
T2H 0S6

PHONE: (403) 255-9544
TOLL: (800) 268-2646
www.barnettprotalk.com